


# MATRIX ONE emergency keys


To execute the following options, hold down the keys indicated in the pictures while Matrix One is powered off, then power on and keep the keys down until PLAY/PAUSE/STOP leds flashing. Wait for the complete boot procedure.

1)

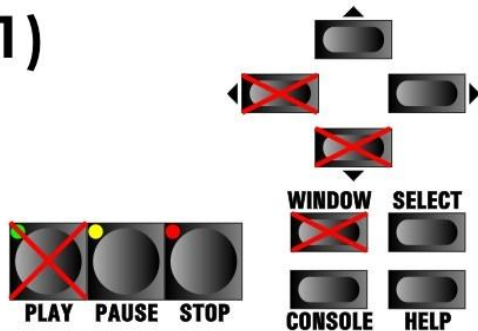


**Trouble:** The display is black. The touch screen doesn't work.  
**Solution:** allows you to show on a VGA monitor the main screen. The mouse arrow will be displayed. To restore the normal working conditions, repeat the same operation.

2)

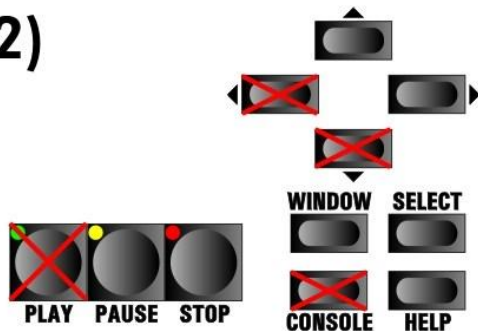

**Trouble:** The display is black. The touch screen doesn't work.  
**Solution:** allows you to show on a TV device (composite signal), the main screen and the mouse arrow. To restore the normal working conditions, repeat the same operation.

3)

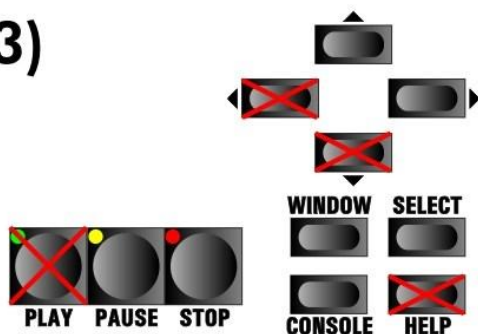

**Trouble:** The touch screen is out of calibration.  
**Solution:** by using the provided nylon pen, press the red dots hinted by the arrows showed on the touch screen.

## NOTE

If , while Matrix One is booting, a message like " Cannot find the file xxxxx.xxx,or is missing, or corrupt..." will appear, please execute the following procedures:

- 1) Connect a PS2 keyboard in the violet plug located on the right sided panel.
- 2) Reboot Matrix One while pressing repeatedly the F8 key on your keyboard.
- 3) A standard windows menu will appear.
- 4) Choose the option "LAST KNOWN CONFIGURATION...", then press ENTER.
- 5) Wait until Matrix One reboots.

If the above mentioned message should reappear, please contact [www.essound.com](http://www.essound.com) tech support